

WK2 Rear Bumper Guard (Corner Protection Kit) Install Instructions

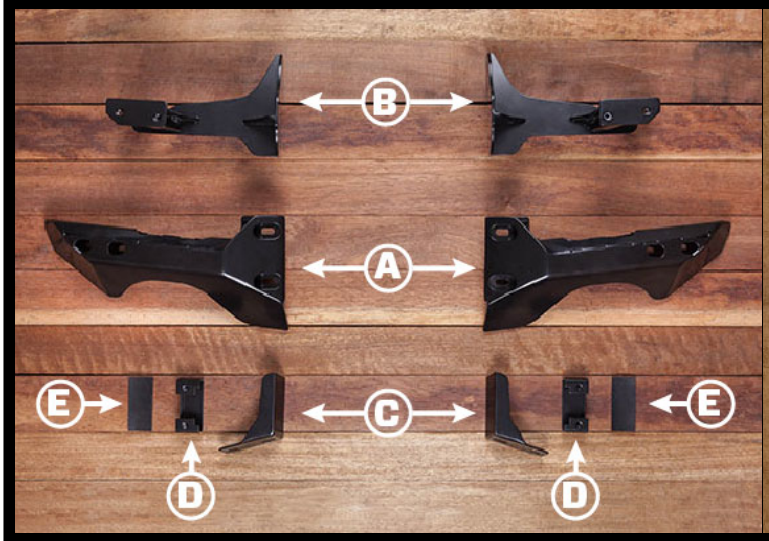

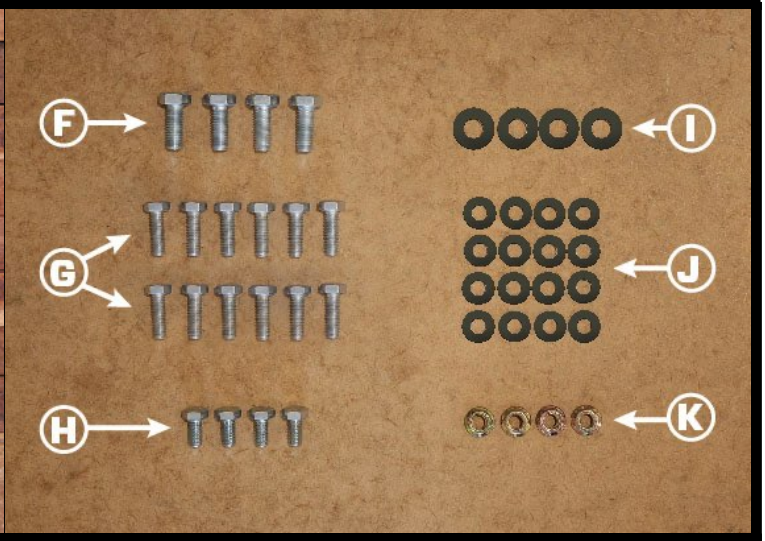

REF	QTY	DESCRIPTION
A	*2*	Corner Guards (LH + RH)
B	*2*	Main Mounting Brackets (LH + RH)
C	*2*	Corner Mounting Brackets (LH + RH)
D	*2*	Exhaust Support Bracket
E	*2*	Rubber Support
F	*4*	M10 x 25mm High Tensile (10.9) Bolts (Zinc Plated)
G	*12*	M8 x 25mm High Tensile (10.9) Bolts (Zinc Plated)
H	*4*	M8 x 20mm High Tensile (8.8) Bolts (Zinc Plated)
I	*4*	M10 Wedge-Lock Extended Washers (SS316)(BLACK)
J	*16*	M8 Wedge-Lock Extended Washers (SS316)(BLACK)
K	*4*	M8 Flanged Nut
-	*1*	4g Anti-Seize Pouch
-	*1*	Chief Products Shop Rag

REQUIRED TOOLS

- 13mm Socket
- 16mm Socket
- 18mm Socket
- 21mm Socket
- Ratchet
- Ratchet Extension
- 13mm Spanner
- Flat Head Screwdriver
- Drill
- 8mm Drill Bit

NOTES

- Do not over-tighten fasteners.
- Photos are representative only. They may show prototype parts and be taken from multiple vehicles.
- All fasteners to be installed using supplied “Anti-Seize” for best performance.

IMPORTANT


- PROPER INSTALLATION IS ESSENTIAL TO THE PERFORMANCE OF THIS PRODUCT.
- ONLY INSTALL THIS PRODUCT ON A 2011-2021 JEEP GRAND CHEROKEE.
- ONLY USE THE PROVIDED HARDWARE FOR INSTALLATION.
- DO NOT MODIFY THE STRUCTURE OF THIS PRODUCT IN ANY WAY.
- CHECK PRODUCT REGULARLY FOR DAMAGE. REPLACE IMMEDIATELY AT FIRST SIGN OF DAMAGE.
- CHECK FASTENER TIGHTNESS REGULARLY AND TIGHTEN IF REQUIRED.

Upper & Lower Facia Removal.

1

Remove Wheel Well Fasteners.

1. Remove (1) M6 Bolt on each side, (driver & passengers) [Red Square].
2. Remove (2) Plastic Rivets with punch tool on each side, (driver & passengers) [Red Circle].
3. Remove (1) M5 Bolt on each side, (driver & passengers) [Blue Square].

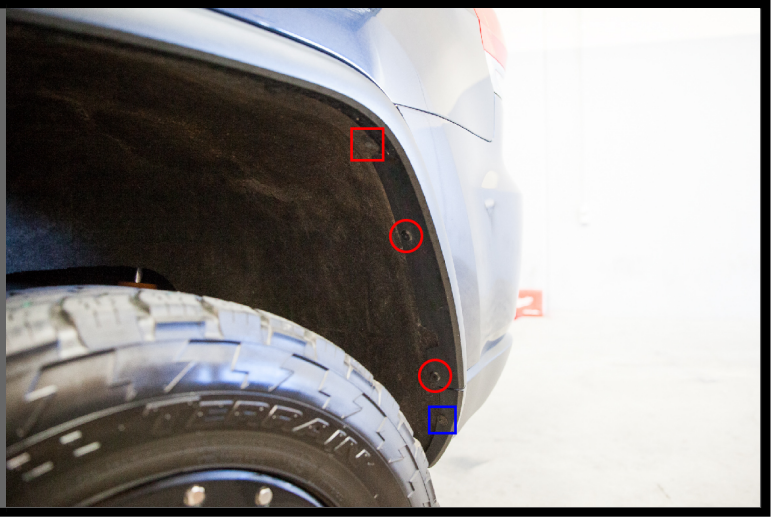

>> CONTINUED ON NEXT PAGE >>

WK2 Rear Bumper Guard (Corner Protection Kit) Install Instructions

2

Remove Boot Fasteners.

1. Remove (2) Torx T30H Bolts from under tail lights.



3

Remove undercarriage fasteners.


1. Remove (2) Plastic Fasteners with a flat head screwdriver.



4

Disconnect Fender Flares.

1. Pull the wheel well lining from under the fender towards the inside.
2. Push the (3) plastic tab style clips from the inside to release the rear of the fender.
3. Do this for both sides (driver & passenger).

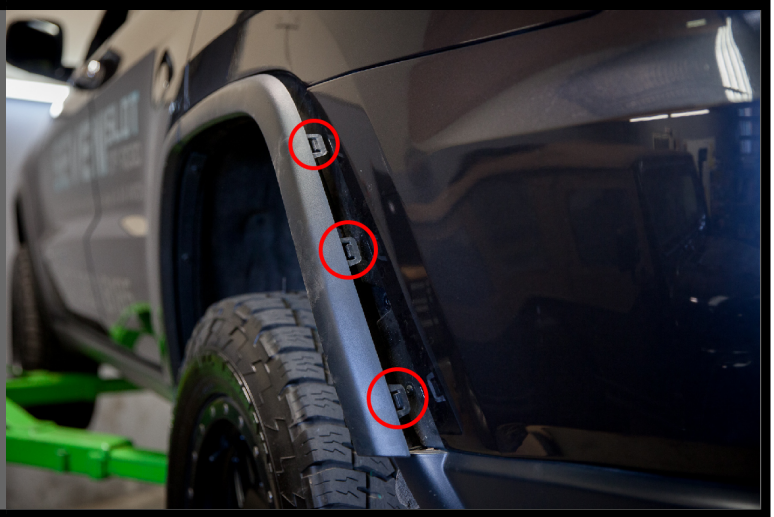

>> CONTINUED ON NEXT PAGE >>

WK2 Rear Bumper Guard (Corner Protection Kit) Install Instructions

5

Remove Upper Facia Fasteners.

1. Remove (1) M4 Bolt from behind the fender flare.
2. Do this for both sides (driver & passenger).



6

Disconnect Plastic Locator.

1. Unclip upper facia from plastic clip.
2. Do this for both sides (drivers & passengers).



7

Remove Upper & Lower Facia.

1. Unclip upper facia from wheel wells on each side (drivers & passengers).
2. Unclip upper facia from Tail lights on each side (drivers & passengers).
3. Disconnect parking sensor wiring loom on left hand side of vehicle (if applicable).
4. Set aside the upper facia in a safe place.



>> CONTINUED ON NEXT PAGE >>


WK2 Rear Bumper Guard (Corner Protection Kit) Install Instructions

Begin Installation.

8

Remove Exhaust Hangers.


1. Disconnect rubber exhaust Hanger from exhaust hanger [Red Circle].
2. Remove (1) M8 bolt connecting the exhaust hanger to the body [Red Square].
3. Remove (1) M8 Flanged Nut connecting the exhaust hanger to the body [Blue Square].
4. Remove Hanger from body.
5. Do this for both sides (drivers & passengers).

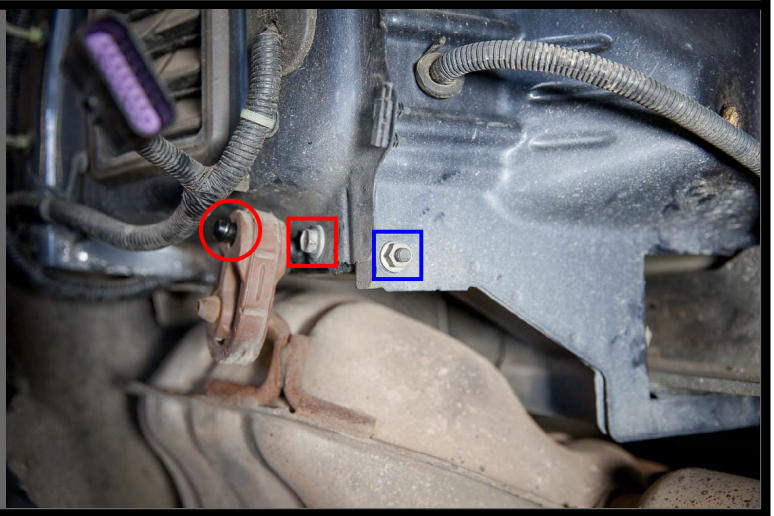

9

Modify Exhaust Hangers.

1. Using the template available on the final page, print and cut out.
2. Place the cut out template into the Exhaust Hanger and drill using an 8mm drill bit.
3. Do this for both sides (drivers & passengers). If you have a single exhaust you will need to use the additional WK2 Rear Bumper Guard (Corner Protection Kit) (Single Exhaust Kit) purchased from our website.

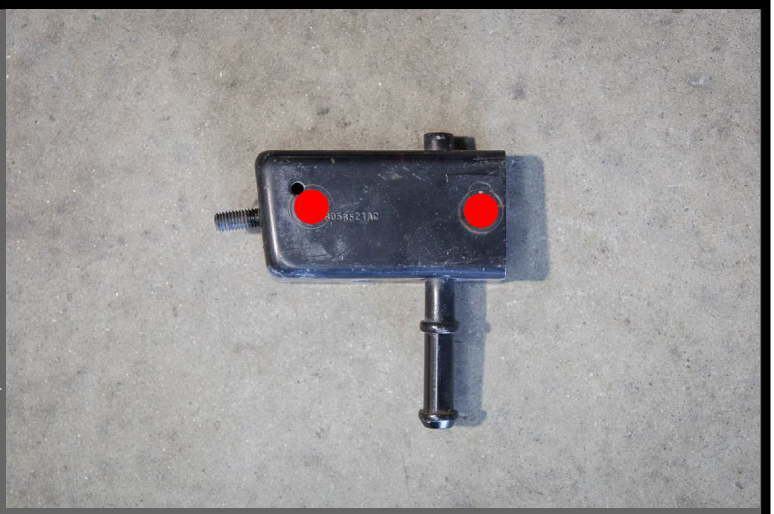

10

Create Exhaust Hanger Stack.

1. Place (1) Exhaust Support Bracket [**D**] into the (1) exhaust hanger.
2. Place (1) Rubber Support [**E**] on top of the Exhaust Support Bracket [**D**].
3. Do this for both sides (drivers & passengers).




>> CONTINUED ON NEXT PAGE >>

WK2 Rear Bumper Guard (Corner Protection Kit) Install Instructions

11

Install Exhaust Hanger.

1. Install Exhaust Hanger back into appropriate side.
2. Reusing the (1) OEM M8 20mm bolt reinstall to exhaust hanger [Red Square].
3. Reusing the (1) OEM M8 Flanged Nut reinstall to exhaust hanger [Blue Square].
4. Slide (1) M8 Wedge-Lock Extended Washer [**J**] onto each (2) M8 x 20mm bolts [**H**].
5. Bolt (1) Corner Mounting Brackets [**C**] to the exhaust hanger using the bolt & washer combo. Tighten. (Red Circle)
6. Do this for both sides (drivers & passengers).

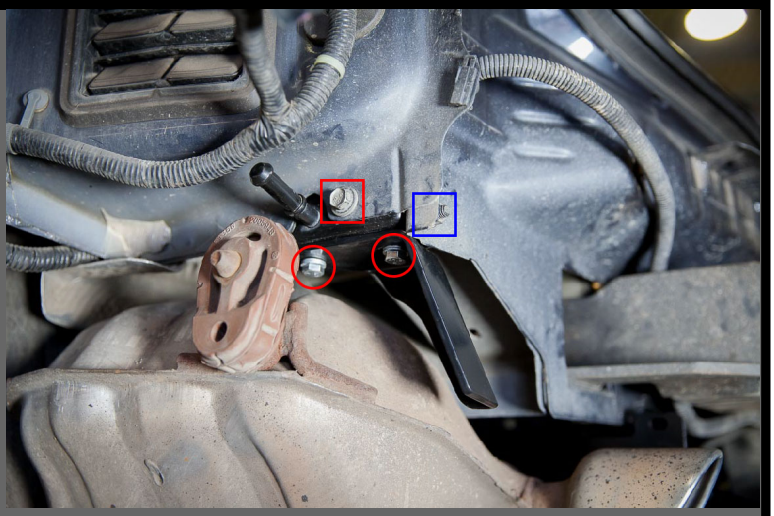

12

Install Main Mounting Bracket.

1. Slide (1) M8 Wedge-Lock Extended Washer [**J**] onto each (2) M8 x 25mm bolt [**G**].
2. Place (1) Main Mounting Bracket [**B**] against the WK2 Rear Bumper Guard - Standard Mounting Bracket and install with the bolt & washer combo [Red Circle]. Tighten.
3. Do this for both sides (drivers & passengers).

NOTE: You may need to adjust the WK2 Rear Bumper Guard - Centre Guard for everything to line up.



13

Drill Corner Mounting Brackets.

1. Mark a hole from the three pre-drilled holes on the Main Mounting Bracket [**B**] that line up in the middle of the Exhaust Support Bracket [**C**]. Do this for both rows.
2. Remove the Corner Mounting Bracket [**C**] from the vehicle.
3. Drill the two marked holes on the Corner Mounting Bracket [**C**] using a 8mm drill bit.
4. Reinstall the Corner Mounting Bracket [**C**] on the vehicle. Reconnect Exhaust Rubber Hanger.
5. Do this for both sides (drivers & passengers).




>> CONTINUED ON NEXT PAGE >>

WK2 Rear Bumper Guard (Corner Protection Kit) Install Instructions

14

Attach Main Mounting Bracket to Corner Mounting Bracket.

1. Slide (1) M8 Wedge-Lock Extended Washer [**J**] onto each (2) M8 x 25mm bolt [**G**].
2. Install the Bolt & Washer combo through both the Corner Mounting Bracket [**C**] and then Main Mounting Bracket [**B**] and tighten with (1) M8 Flanged Nut [**H**].
3. Do this for both sides (drivers & passengers).

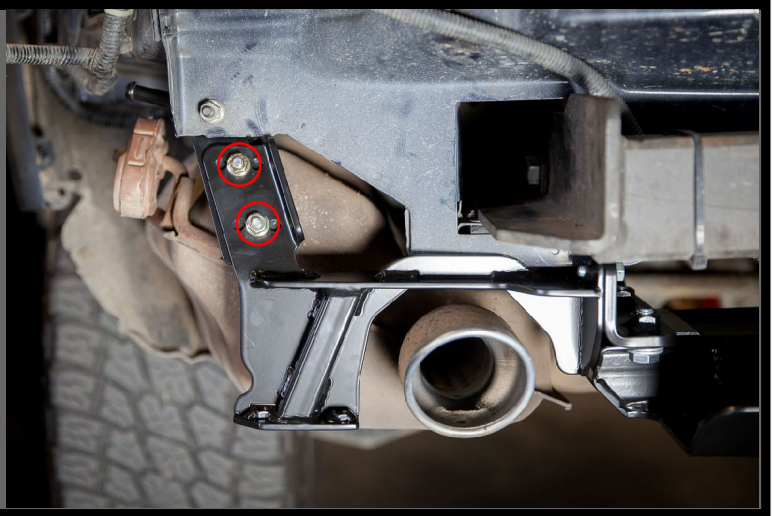

Install Upper & Lower Facia.

15

Reinstall OEM Upper & Lower Facia.

1. Connect the parking sensor wiring loom on the left side of the vehicle.
2. Starting at the top, push the OEM Upper & Lower Facia below the tail lights and move down to the wheel wells.
3. Do this for both sides (Driver & Passenger).



16

Install Upper Facia Fasteners.

1. Reusing the (1) OEM M4 Bolt re-install behind the fender flare.
2. Do this for both sides (driver & passenger)..




>> CONTINUED ON NEXT PAGE >>

WK2 Rear Bumper Guard (Corner Protection Kit) Install Instructions

17

Install Fender Flares.

1. Working your way backwards push the clips for each fender flair back into the body.
2. Do this for both sides (driver & passenger).

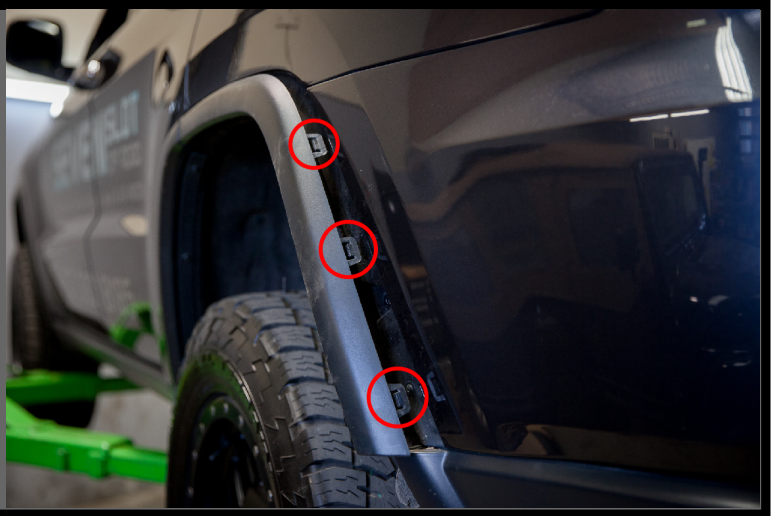

18

Reinstall Undercarrage fasteners.

1. Reusing the (2) OEM Plastic Push Fasteners, re-install under the vehicle.



19

Reinstall Boot Fasteners.

1. Reusing the (2) OEM Torx T30 Bolts re-install below the tail lights.




>> CONTINUED ON NEXT PAGE >>

WK2 Rear Bumper Guard (Corner Protection Kit) Install Instructions

20

Re-Install Wheel Well Fasteners.


1. Reusing the (1) OEM M6 Bolt re-install on each side, (driver & passengers) [Red Square].
2. Install (2) Plastic Trim Fasteners [**F**] on each side, (driver & passengers) [Red Circle].
3. Reusing the (1) OEM M5 Bolt re-install on each side, (driver & passengers) [Blue Square].

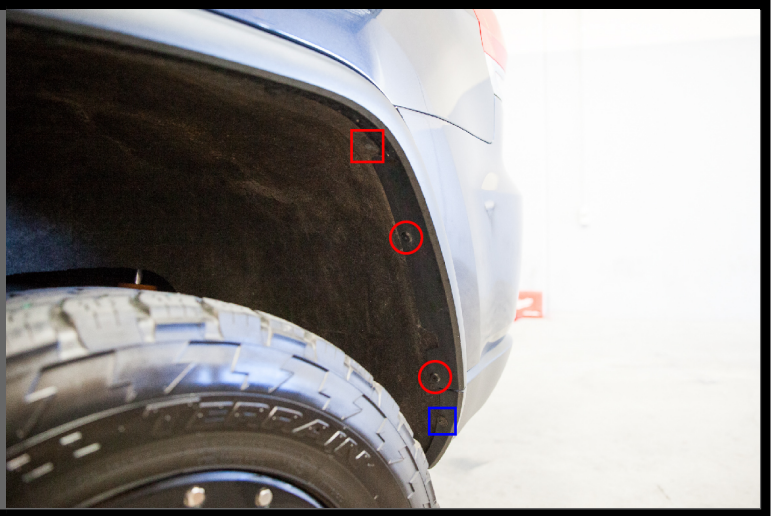

21

Install Corner Guards.

1. Slide (1) M10 Wedge-Lock Extended Washer on each (2) M10 x 25mm Bolts.
2. Slide (1) M8 Wedge-Lock Extended Washer on each (2) M8 x 25mm Bolts.
3. Place (1) Corner Guard [**A**] against the WK2 Rear Bumper Guard (Standard) Centre Guard and Main Mounting Bracket (**B**).
4. Using the M10 Bolt & Washer combo install the Corner Guard [**A**] to the Centre Guard [Blue Square].
5. Using the M8 Bolt & Washer combo install the Corner Guard [**A**] to the Main Mounting Bracket [Red Circle].
6. Before Tightening all bolts, slide Corner Bracket so it is evenly spaced from the Lower Facia.
7. Do this for both sides (driver & passenger).

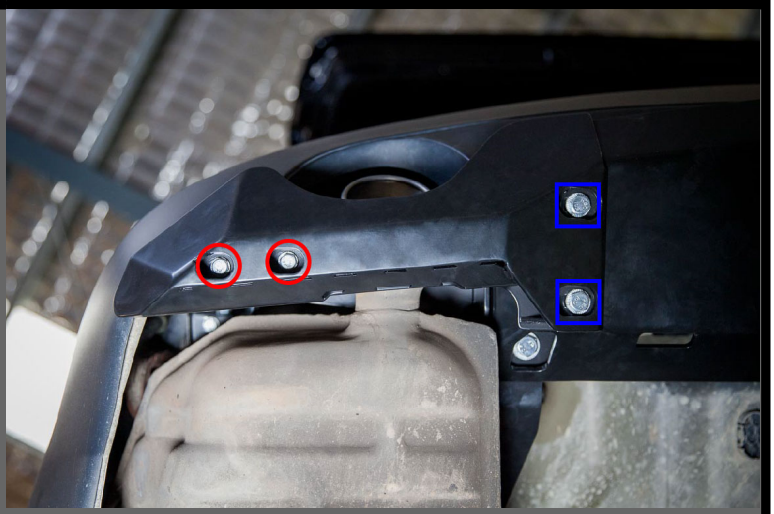

The WK2 Rear Bumper Guard (Corner Protection Kit) is now fully installed.

>> CONTINUED ON NEXT PAGE >>

MAINTENANCE

FASTENERS

- Check fastener tightness regularly and tighten if required. We recommend checking fasteners after every large off-road trip.

CORROSION PROTECTION

- After an off-road trip; rinse all mud, sand or debris off the product.
- After driving in salt water; rinse product thoroughly with fresh water.

EXTRA CARE

- If you're planning to drive in a salty environment; spray fasteners with WD40 or an equivalent.
- If you're planning to drive in a salty environment; spray product with Lanolin or an equivalent.
- Spray deep scratches (before they rust) with touch up paint to help inhibit corrosion.

SUPPORT

Find answers online.
www.chiefproducts.com.au/pages/support

Having troubles? Make sure you've downloaded the most recent version of these instructions from our website. We occasionally make updates.
www.chiefproducts.com.au/installation/wk2-rear-bumper-guard-corner-protection-kit.pdf

If you need additional help, send us an email.
support@chiefproducts.com.au


SHARE

Looking to share epic photos of your WK2?
Send us your photos - Unboxing, Fully Installed, Painted-In-Mud or out Adventuring in some beautiful location. If you share with us, we'll share with our followers.

UPLOAD
www.chiefproducts.com.au/share

EMAIL
connect@chiefproducts.com.au

HASHTAG
#ChiefProducts #GrandAdventure

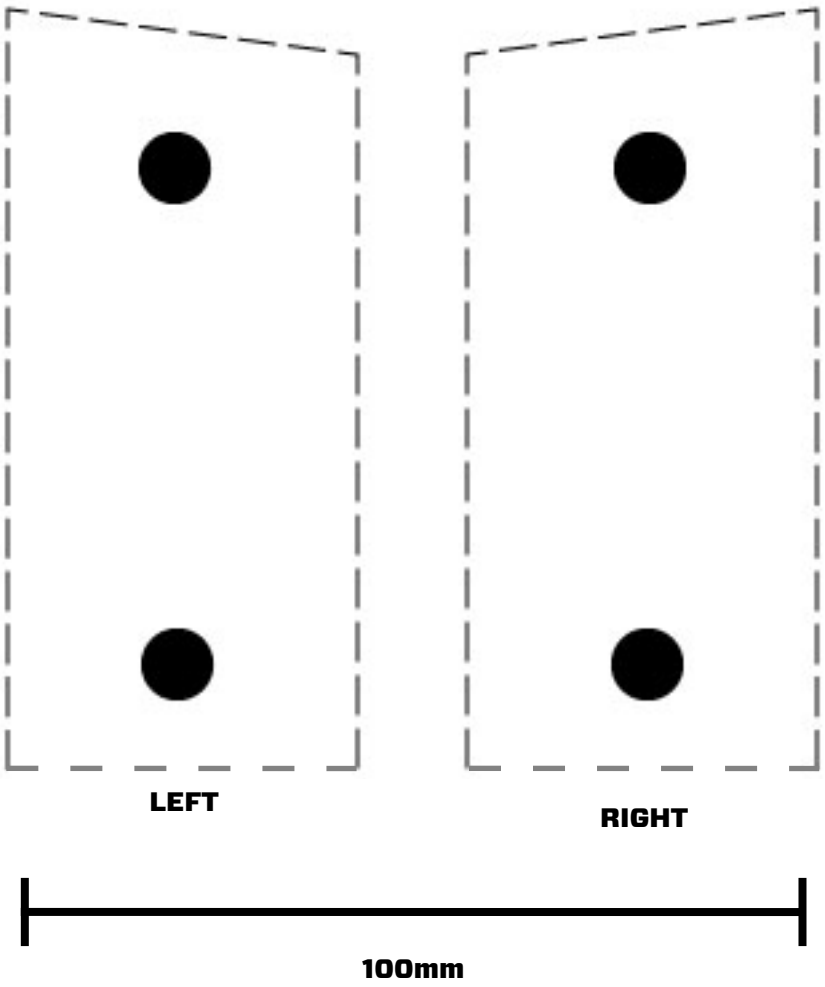

NOTE: Ensure printer does not scale this page.